

FOOTSWITCH EXTENSION SOCKET



ECOSAVERS

EcoSavers®

Footswitch Extension Socket

The EcoSavers Extension cord with foot switch is a handy product if sockets are in hard-to-reach places, such as behind a cupboard or dresser.

You can easily switch one device (or several devices when used in combination with a multiple socket) by means of the foot switch (1.5 meter cable).

The foot switch can be placed in an easily accessible position.

Also ideal for low sockets if bending is difficult. Simply switch the connected device off and on with the foot switch.

The foot switch is illuminated (blue), as well as an LED indicator on the push-through plug itself (blue). This allows you to visually see if there is power on the connected device.

Provided with Intertek Bauart Geprüft certification.



ECOSAVERS®